

ROCKWHEEL SERVICE DOCUMENT

Direct Drive (D-series) Drum Greasing Instructions

Tools needed

- Grease gun
- Bar as leverage to turn the drums 1/4 turn

1. Identify the grease port on the outside of the Drum.
2. Pump grease until you see it coming out of the space between the drums and housing.
3. Rotate the drums 90° and repeat 3 times until the entire drum is properly greased.
4. Repeat the procedure on the other drum

Rockwheel Americas recommends **DAILY GREASING** at the end of each shift



Grease port on the drum



Proper greasing: coming out between the drum and housing